

Removing

- Removing rear door trim → [General body repairs, interior; Rep. Gr.70.](#)
- Removing and installing lock cylinder housing → [Chapter.](#)
- Lever out cap -1-.
- Lower door window until spreader pin -2- and spreader plug -3- are accessible in the cut-out of the window regulator.



Note

If the work step cannot be carried out because there is a fault with the electric window motor, remove motor to slide window down.


- Screw a 5 mm bolt (approx. 70 mm long) in the spreader pin -2- and pull out from spreader plug -3-.
- Now screw an 8 mm bolt (approx. 80 mm long) into spreader plug -3-.




Note

When screwing in bolt, do not exert too great a pressure on the spreader plug because otherwise the plug will fall into the door.

- Pull spreader plug out of window guide and thereby out of door window.
- When doing this press window regulator Bowden cable to side with a screwdriver.

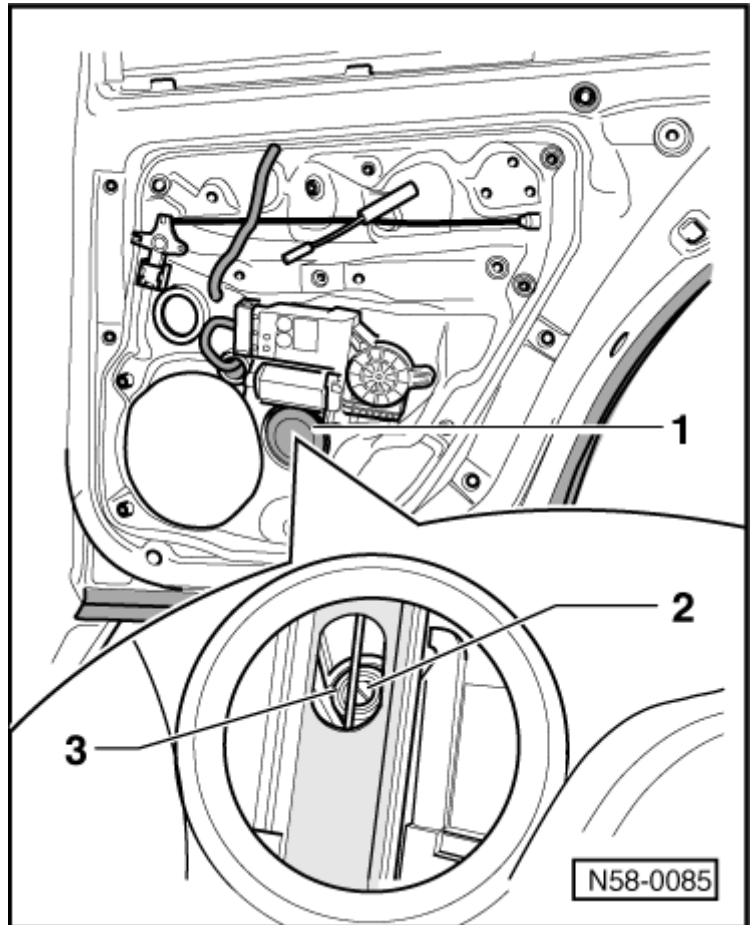


- Pull off seal -1- from centre column to window aperture seal -2-.
- Lever out cap -3-.
- Then remove screw that becomes visible.

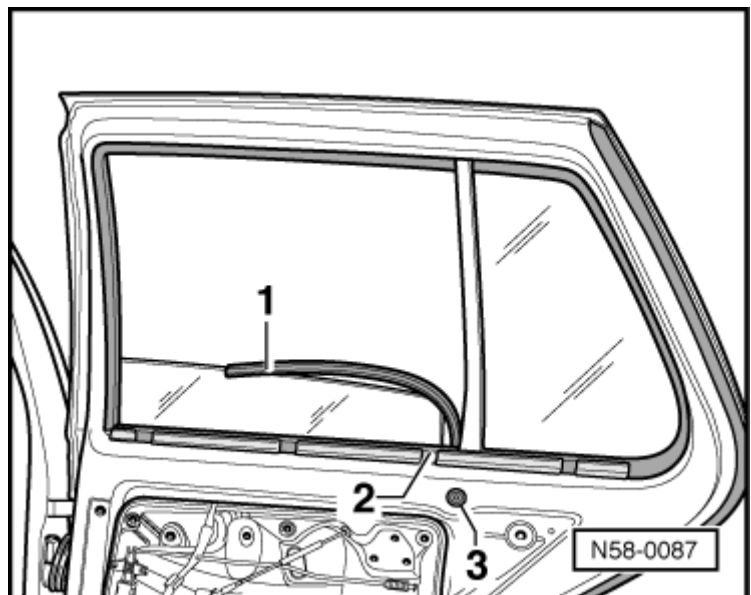


- Using a screwdriver -1-, lift up locking lug -2- and take filler piece -3- upwards out of window column.

- Grasp inner window aperture seal -1- using pliers -2-. Then move pliers in direction of arrow whilst lifting the window aperture seal -1- up out of door flange with light twisting motion at the same time.

- To ease removal of the window aperture seal, use a wedge -3- to supplement the pliers.

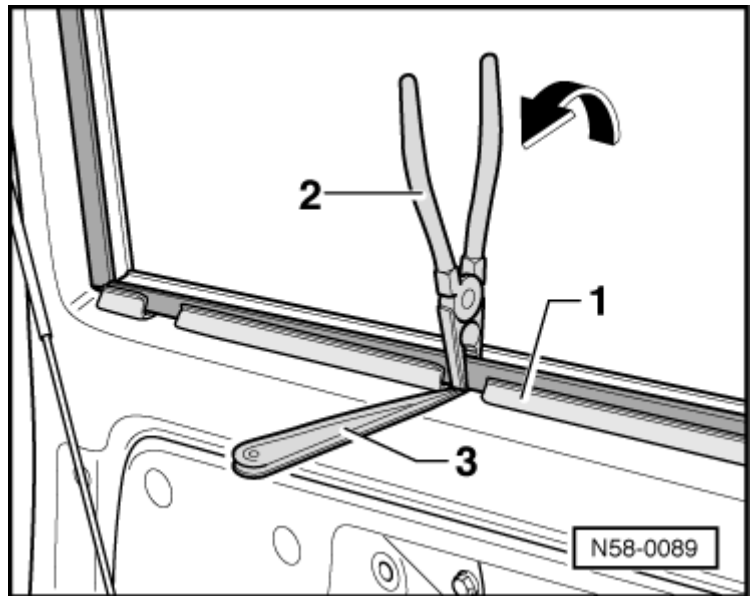

- Slide door window -1- upwards and take out of door towards interior -arrow-.

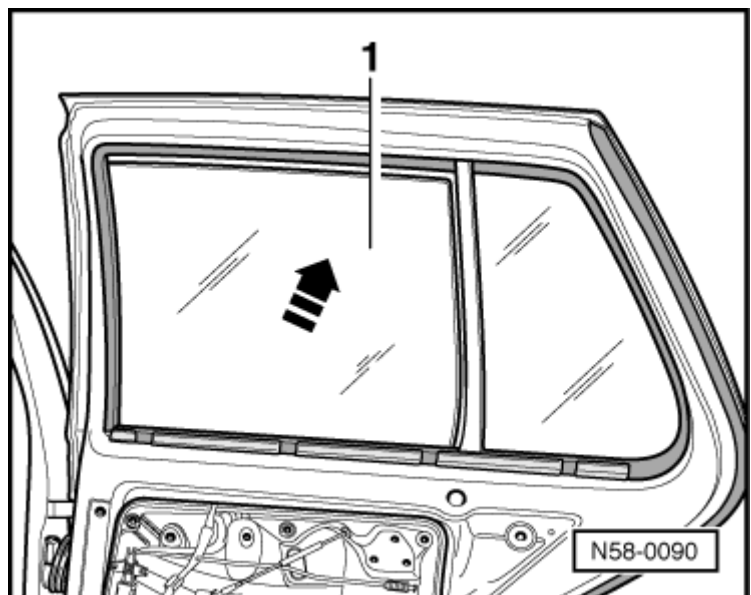


- Pull off window guide -1- in upper area and remove cross-head -2- in centre column.




Note

- ♦ The cross-head screw -2- will gradually be discontinued. Instead, the centre column will be clipped in at the top of the door.
- ♦ The remaining work sequence is the same.

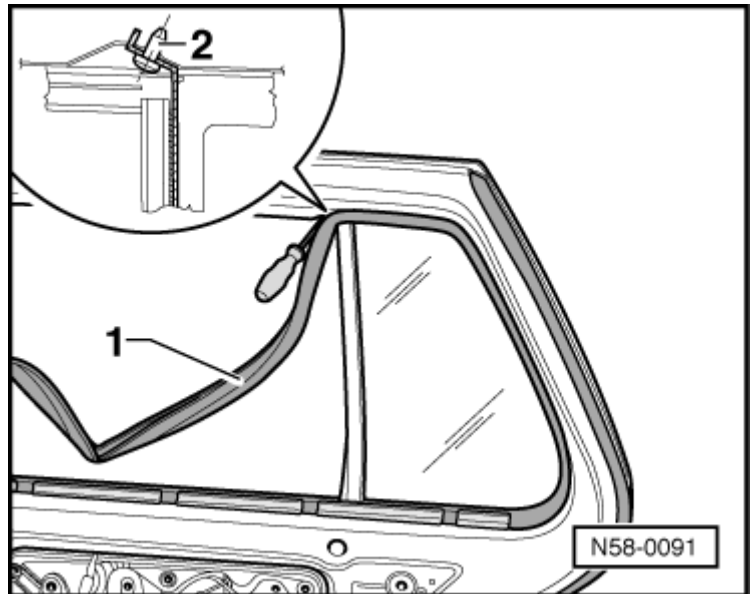

- Remove hexagon bolt -1-.
- Pull centre column -2- off quarter light window seal -3- and pull downwards out of upper window guide.

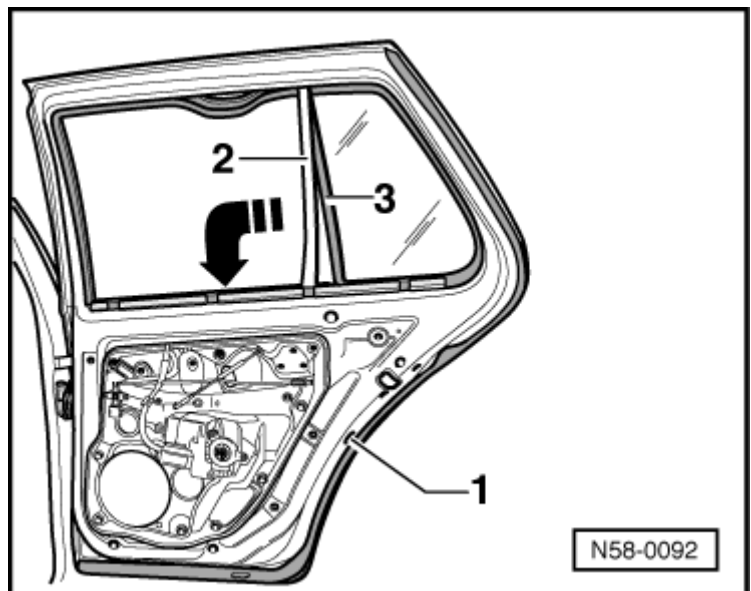

- Take centre column -1- upwards out of door.

